



TABLETOP
ARMORY

Deluxe Wrack

Assembly Instructions



Note on adhesive: Wood glue or CA (super) glue is required for every step. Loctite or Gorilla Glue work well. Apply a small amount to each tab before inserting and wipe away any squeeze-out before it cures.

Parts




Bottom Plate



Front Wall




Back Wall

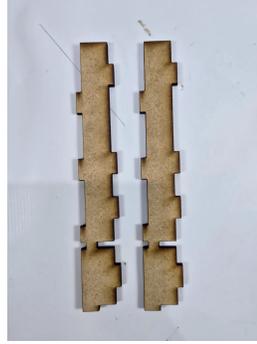


Side Risers (x2)




Center Riser

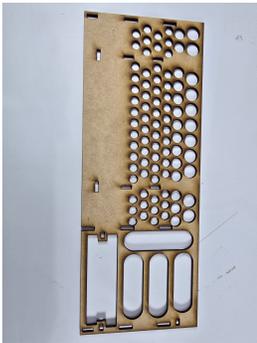

Bottom Sorter

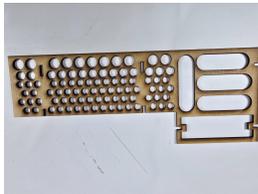

Top Sorter

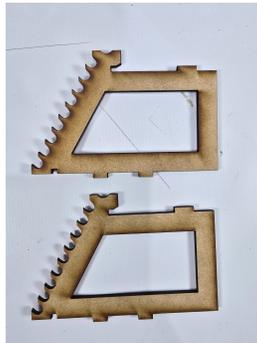

Wracks (x2)



Wrack Stabilizer



Stabilizers (x3)

Step 1 of 6



- Insert the Back Wall into the Base Plate.

Step 2 of 6



- Insert the Center Riser, then attach the Side Risers and Front Wall.

Step 3 of 6




- Place on the Bottom Sorter.

Step 4 of 6



- Insert the Wrack Stabilizer, then insert the Wracks on top.

Step 5 of 6

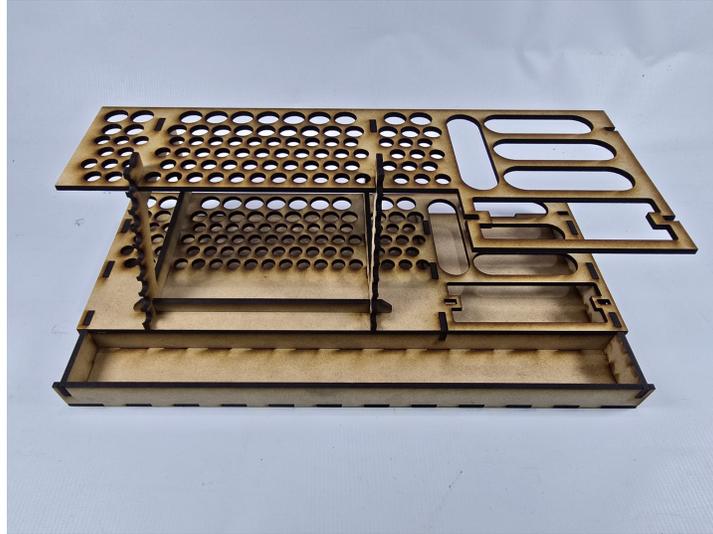

- Slide on the Top Sorter.

Step 6 of 6



- Insert the Stabilizers.